
Installation Instructions

MT050A-KIT-DRYER




MT050A DEHYDRATOR DRYING MEMBRANE REPLACEMENT KIT

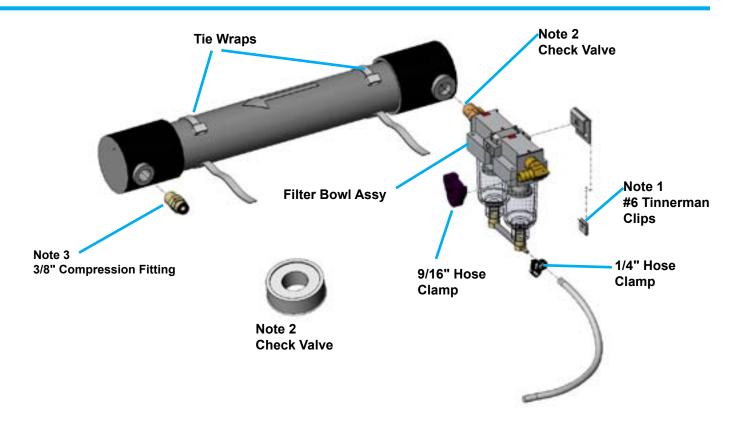

FILTER BOWL AND DRYER TUBE SUB-ASSEMBLY

- Install #6-32 Tinnerman clips onto filter bowl mounting bracket so that the clips snap into place with the curved lip on the filter bowl side.
- 2. Wrap male threads on check-valve side of filter bowl assembly with PTFE tape (included). Screw assembly into dryer tube input until hand-tight.
- 3. Wrap threaded end of the 3/8" compression fitting with PTFE tape. Screw compression fitting into output side of dryer tube.

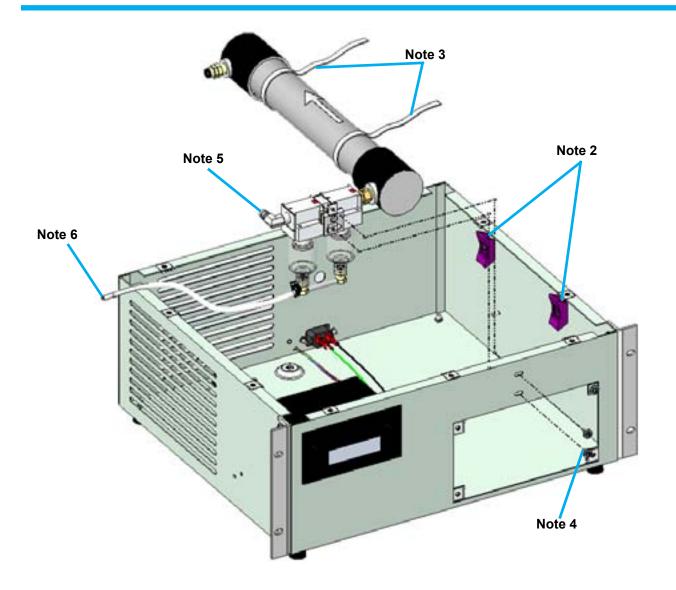

DRYER TUBE AND FILTER BOWL INSTALLATION

MT050A DEHYDRATOR DRYING MEMBRANE REPLACEMENT KIT

- 1. Ensure that the filter bowl and dryer tube subassembly is complete as shown to the left.
- 2. Slide the end of the cable ties through the slots in the saddle mounts. Wrap the white nylon cable ties around the dryer tube.
- 3. Fasten the filter bracket to the chassis using #6-32 screw assemblies, or #6-32 screws with #6 flat and lock washers.
- 4. Tighten the cable ties around the dryer tube. Trim off excess part of cable ties.
- 5. Attach compressor output hose to the 5/16 barbed fitting on the filter bowl input.
- 6. Slide two 1/4" hose clamps onto the solenoid drain hose. Attach the solenoid drain hose to 1/8" barb on bottom part of filter bowls and solenoid input barb.





MT050A-KIT-DRYER

MT050A DEHYDRATOR DRYING MEMBRANE REPLACEMENT KIT

