

SYSTIMAX® Solutions

www.commscope.com



SYSTIMAX 360[™] Rear Cable Management Kit Instructions

General

The SYSTIMAX 360[™] rear cable management kit is available in two panel mounted configurations and one rack mounted configuration. One cable management kit is designed for use on all non-Evolve 360 panels and the other kit is for use on 360 Evolve panels only. The rack mounted cable management kit is used on 360 non-Evolve panels only.

Ordering information is listed below:

Material ID	Part No.	Description
760104398	360-RCM-BM	Rear cable management kit for non-Evolve 360 panels
760157628	360-E-RCM-BM	Rear cable management kit for 360 Evolve panels
760104737	360-RCM-RM	Rack mounted cable management kit for 360 non-Evolve panels

How to Contact Us

- To find out more about CommScope® products, visit us on the web at http://www.commscope.com/
- For technical assistance:
 - Within the United States, contact your local account representative or technical support at 1-800-344-0223. Outside the United States, contact your local account representative or Authorized Business Partner.
 - Within the United States, report any missing/damaged parts or any other issues to CommScope Customer Claims at 1-866-539-2795. Outside the United States, contact your local account representative or Authorized Business Partner.


Parts List

Verify parts against the parts list below:

Quantity	Description
1	Cable management bar
4	Cable troughs
4	Hook-and-loop straps
2	12-24 x ½ screws (provided with rack mount version only)
1	Instruction sheet




Step 1 — Assemble Cable Troughs

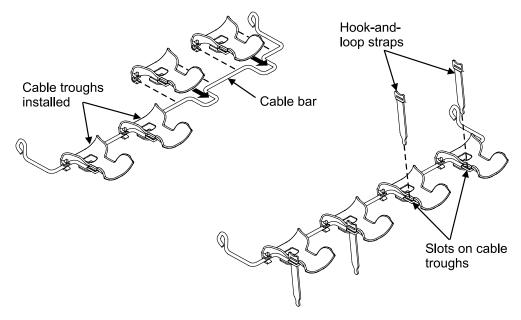

1. Attach the four cable troughs onto bar as shown and insert four hook-and-loop straps into slots in cable troughs.


Step 2 — Install Panel and Cable Bar on Equipment Rack (Rack Mount)

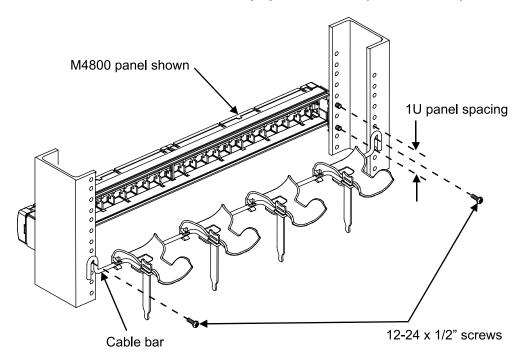

- 1. Attach panel to rack using screws provided with panel.
- 2. Attach cable management bar to rear of equipment rack using the two provided 12-24 x ½" screws as shown. Bar should be level with lower row of outlets on panel.

www.commscope.com 860459940
Issue 4, June 2013


Step 3 — Install Cable Bar on Rear of Panel and Secure Cables (Panel Mount)

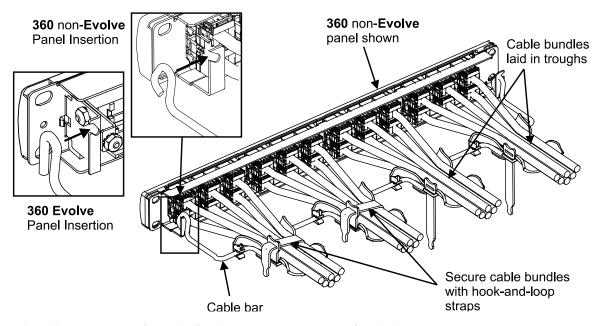

1. Attach cable bar to rear of panel. Equipment rack not shown for clarity.

Note: Depending on the type of panel the bar is being used on (**Evolve** panel or non-**Evolve** panel), the cable bar ends have a different configuration. Both types of cable bar ends attach the same and are shown in figure on previous page.

2. Lay cables evenly in cable troughs and secure using hook-and-loop straps as shown on previous page.

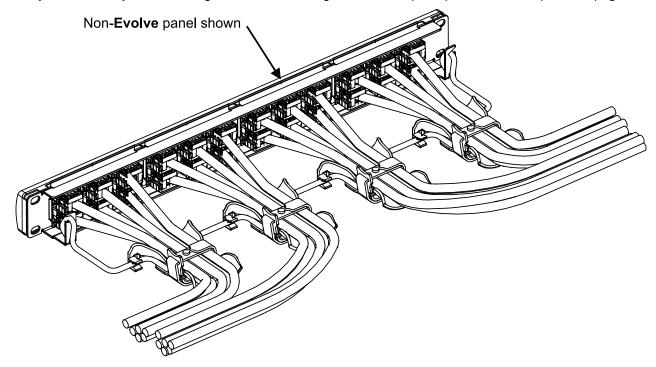

3. The figure above illustrates a typical completed installation.