

Installation Instructions

MT050B and PMT200B

240V Installation Addendum


MT050B

The supplied wire harness is used to disable the auto power detect function of an MT050B dehydrator. It ensures that the dehydrator operates only at 240 Vac $\pm 10\%$. The installation process for the wire harness is as follows:

1. Disconnect the dehydrator from AC power source.



2. Remove the top cover.

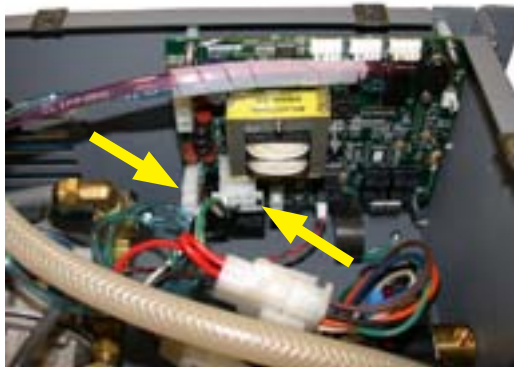

3. Unplug the compressor and wire harness from the controller.



4. Connect the 4 and 6 pin female connectors to the mating connectors on the wire harness.



5. Plug the male connectors in to the controller.



6. Return the cover.
7. Connect the AC power source.
8. The dehydrator will now operate only at 240 Vac power source.


PMT200B

The supplied wire harness is used to disable the auto power detect function of an PMT200B dehydrator. It ensures that the dehydrator operates only at 240 Vac $\pm 10\%$. The installation process for the wire harness is as follows:

1. Disconnect the dehydrator from AC power source.



2. Remove the top cover.

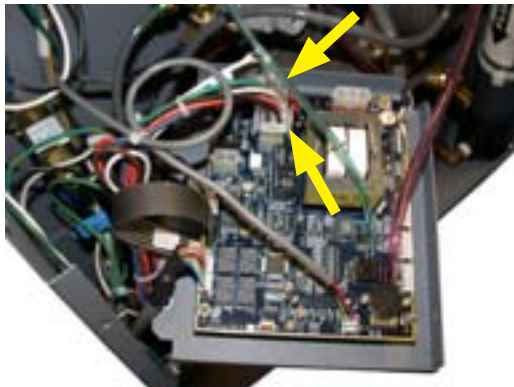

3. Unplug the compressor and wire harness from the controller.



4. Connect the 4 and 6 pin female connectors to the mating connectors on the wire harness.



5. Plug the male connectors in to the controller.



6. Return the cover.
7. Connect the AC power source.
8. The dehydrator will now operate only at 240 Vac power source.